

User Guide

OontZ *Angle 3 Pro*

The Waterproof Bluetooth Speaker
Incredible Sound, Powerful Volume, 100 Foot Wireless Bluetooth Range

 
OontZ App for the OontZ Angle 3 Pro
Control the OontZ Angle 3 Pro Advanced Features
from your iPhone or Smartphone

Designed and Engineered By
CAMBRIDGE SOUNDWORKS.

TheOontZ.com

In the Package

OontZ
Angle 3 Pro

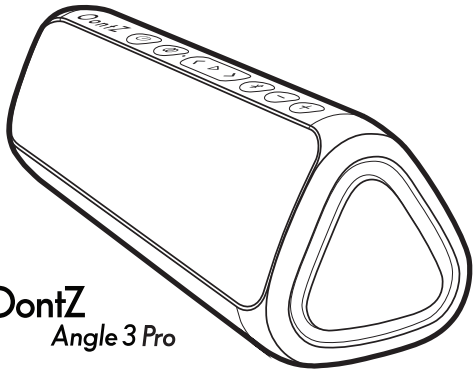

User Guide



USB Type C Charging Cable




3.5mm Stereo Audio Cable

Table of Contents

	Pages
Buttons, Built-in Mic, Lights, and Connectors.....	1 - 3
Battery Features and Charging the Battery	4 - 5
Turning On and Off	6
Pair & Connect with Your Device	7 - 10
IPX7 Water Resistance.....	11
Talk to Siri	12
To Play with Non-Bluetooth Devices Use a 3.5mm Stereo Audio Cable.....	13
OontZ Wireless Dual Stereo - Connect Two OontZ Angle 3 Pro Speakers Together	14 - 18
The OontZ App.....	19 - 27
Reset Function	28
Contacting Customer Support	29
Safety and Precautions	30 - 31

 Buttons & Built-in Mic

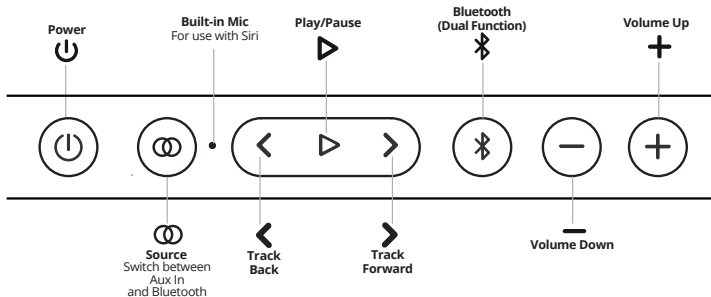

Important - The volume control on your device and the speaker work independently of each other.

To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

Important - Some apps may not support track back, track forward, or play/pause

Lights

Power Button Light

Lit Red when charging

- **Slowly flashing** - battery is charging
- **Solid** - battery is fully charged
- **Rapidly flashing** indicates battery charge is low

 
Source Button Light

Lit Green when Aux In is the selected the audio source

Bluetooth Button Light

Lit Blue when speaker is on:

- **Flashing** in Bluetooth pairing mode
- **Solid** connected to Bluetooth Device



Play/Pause Button Light - Single Speaker

 
- **Lit Green** when connected to OontZ app on iPhone or Smartphone

Play/Pause Button Light - Two Speakers

Lit White/Orange when speakers are in OontZ Wireless Dual Stereo

- With a second OontZ Angle 3 Pro speaker (**sold separately**) you can wirelessly connect both speakers together to play with OontZ Wireless Dual Stereo.
- For OontZ Wireless Dual Stereo instructions please see page 14.

Connectors

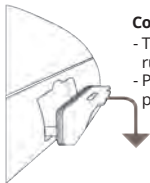

Connectors under the Rubber Flap

- To access the connectors open the rubber flap
- Pull the tab from the top, it is a snug fit as part of the waterproofing

 


Closing Rubber Flap

- Align the Rubber Flap directly over the connector bay. Push the Rubber Flap straight in until the edges are even with the edges of the connector bay.

IMPORTANT:

- The rubber flap needs to be closed before the speaker is exposed to water.
- The speaker is not water-resistant or waterproof when the rubber flap is open.

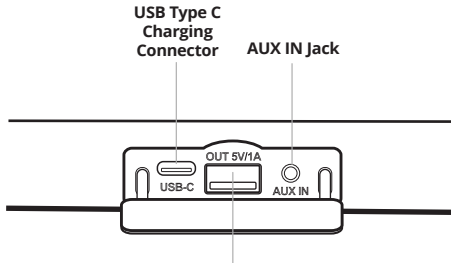

USB Power Bank

- Use for keeping your iPhone or Smartphone charged while playing.
- Use to power your Echo Input.
- Output 5V - 1A

Battery Features

- The rechargeable battery comes with a partial charge and the speaker is ready to play.
- For maximum playtime, fully charge the battery.
- You can play while charging.

Low Charge Remaining

- When the battery charge has less than 20% remaining the Power Button Light will begin flashing Red rapidly, the USB Power Bank will turn off and the volume will decrease to preserve the remaining battery.
- To return to full volume follow the steps to charge the battery on Page 5.

Music Play Time

- Up to 15 hours on a full charge, at 2/3 volume.
- Louder volumes will reduce the battery play time.
- When using the USB Power Bank the play time will be reduced.

Power Saving Feature

- When playing from battery power the OontZ Angle 3 Pro will turn off after 30 minutes of not playing audio to conserve the battery charge. *
- When plugged into a charging source the OontZ Angle 3 Pro will remain on until you turn the power off.
- You can continue to keep the speaker plugged into a charging source even when it is fully charged, keeping the speaker turned on and available.

* Exception: certain devices, including the Amazon Echo Input, Amazon Echo Dot and Amazon Echo, disable the Power Saving Feature and the speaker will remain on until you turn the power off.

Charging the Battery

Lit Red when charging:

 
- **Slowly flashing** battery is charging
- **Solid** battery is fully charged



Insert the small end of the USB Type C Charging Cable into the Charging Connector as shown.

Insert the larger end of the USB Type C Charging Cable into a USB wall charger for a Smartphone or iPhone (USB wall charger* that is 5V  3A maximum) to charge the OontZ Angle 3 Pro battery.

* Only use a USB wall charger that is UL listed. A UL listed USB wall charger will have the logo  printed on it.

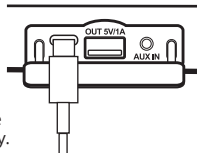




Charging Time - Up to 3 hours to fully charge a low battery.

Important: When the OontZ Angle 3 Pro is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

Turning On and Off

 Turn ON



- Press and Release the Power Button 
- Power Button Light  will turn **Red** for 3 seconds then turn off
- Bluetooth Button Light  will turn **Blue**

Bluetooth Button Light

- **Flashing Blue** in pairing mode
- **Solid Blue** your device has connected with the OontZ Angle 3 Pro and is ready to play



Turn OFF

- Press and Hold Down the Power Button for 2 Seconds 
- Bluetooth Button Light  will turn off

Pair & Connect with Your Device – Step 1

Turn ON your OontZ Angle 3 Pro 


Flashing Blue Light

- The OontZ Angle 3 Pro is ready to pair and connect.

Solid Blue Light

- Your device has connected to the OontZ Angle 3 Pro and is ready to play.
- The OontZ Angle 3 Pro allows the last device it was connected with to automatically reconnect with the speaker each time the speaker is turned on and that device is within range.*

The OontZ Angle 3 Pro can be connected to one device at a time.

- To pair and connect to a different device, you need to first disconnect the currently paired device.
- To disconnect the current device, press and hold down the **Bluetooth button**  for 3 seconds.
- The **Blue Light** will begin **flashing** and the OontZ Angle 3 Pro is ready for the next device to pair and connect.


*Exception: certain devices may not automatically reconnect. When connected to an Amazon Echo device it will not automatically reconnect. You will need to say to your Amazon Echo device, "Alexa, connect my speaker".

- Your device needs to be within 100 unobstructed feet of the OontZ Angle 3 Pro to pair and connect.
If there is an issue when connecting please move your device closer to the speaker, then pair and connect.
- When the charge is too low indicated by a flashing red light on the speaker, your device will not be able to connect with the speaker.



Pair & Connect with Your Device -- Step 2 --

-- With Your iPhone, iPad, iPod, Smartphone, Tablet & Mobile Devices

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ_Angle 3 Pro xxx' when it appears under DEVICES (xxx: 3 characters which are unique to your speaker)
- Your device will connect in a few seconds
- The **Bluetooth Button Light**  will turn solid blue and there will be a quiet chime
- You can now play your audio wirelessly to your OontZ Angle 3 Pro

Note: Your Smartphone or Tablet instructions may vary

Important - The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

-- With Your Apple Mac or Windows Laptop/Computer

For the pairing and connecting guide for your Apple Mac or Windows laptop/computer, please visit: **TheOontZ.com/pairing**.

Pair & Connect with Your Device -- Step 2 --

-- With Your Amazon Echo, Amazon Echo Dot or Amazon Echo Input

To pair and connect with the Amazon Echo, Amazon Echo Dot or Amazon Echo Input for the first time use the Alexa app. For other Amazon Alexa devices please refer to their pairing and connecting instructions.

- Open the Alexa app
- Select your Amazon Echo device by pressing 'Devices' in the lower right corner of the screen.
- Press 'Echo & Alexa'
- Select your Amazon Echo device by pressing it
- Press 'Bluetooth Devices'
- Press 'Pair a New Device'
- Select the 'OontZ_Angle 3 Pro xxx' (xxx: 3 characters unique to your speaker) when it appears in the list of 'Available Speakers'
- Alexa will announce: "Connected to OontZ_Angle 3 Pro xxx"


To connect the next time, turn on the OontZ Angle 3 Pro and say "Alexa, connect my speaker" or "Alexa, pair"

Pair & Connect with Your Device -- Step 2 --

-- With Your Amazon Echo or Amazon Echo Dot (continued)

Important Note: When the OontZ Angle 3 Pro is playing from battery power and connected to the Amazon Echo device, the speaker will remain on and it will not automatically turn off after 30 minutes of not playing audio. This will use up the battery charge.

We recommend to:

- 1) Keep the OontZ Angle 3 Pro plugged into a USB wall charger.
It can remain on and available to play from the Amazon Echo device.
- Or -
- 2) Turn off the OontZ Angle 3 Pro when you are done listening.
 - Either turn off the speaker by pressing and holding down the power button  for 2 seconds,
 - or say "Alexa, disconnect my speaker" and the OontZ Angle 3 Pro will automatically turn off after 30 minutes.
 - When you want to connect and play to the speaker again turn on the OontZ Angle 3 Pro and say "Alexa, connect my speaker" or "Alexa, pair".

For assistance with the Alexa app, contact Amazon's Customer Service.
Open the Alexa app and select Help & Feedback > Email Customer Service

IPX7 WaterProof

The OontZ Angle 3 Pro is Waterproof and it is IPX7 certified

The perfect speaker for listening to your favorite music in any environment

Perfect for taking to the lake, the beach, listening by the pool, listening in the shower

IPX7 means the OontZ Angle 3 Pro is WaterProof and can handle water spray or being splashed and can handle being partially or fully submerged in water up to a maximum of 3 feet deep, for up to a maximum of 30 minutes


The rubber flap needs to be closed for the speaker to be waterproof and dustproof.

Important Safety Precaution: When the OontZ Angle 3 Pro speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.

Talk to Siri on your iPhone or iPad through the OontZ Angle 3 Pro

This feature works when connected to an iPhone or an iPad over Bluetooth.

To talk to Siri through the OontZ Angle 3 Pro

 
- Press and Release the Bluetooth Button  on the OontZ Angle 3 Pro
- Wait for about two seconds until you hear a "chime"
- After the "chime" talk to Siri through the mic on the OontZ Angle 3 Pro
- The response from Siri will then play through the OontZ Angle 3 Pro, and may display information on your iPhone or iPad

Your iPhone or iPad needs to be on the latest version of iOS

To Play with Non-Bluetooth Devices Use the 3.5mm Stereo Audio Cable

Turn ON your OontZ Angle 3 Pro 

- Plug one end of the included 3.5mm Stereo Audio Cable into the **AUX IN** jack on the speaker.
- Press the Source Button and the Source Button light will turn solid Green.
- Plug the other end of that 3.5mm Stereo Audio Cable into the headphone jack on your device.
- Make sure both ends of the cable are fully inserted
- You are now ready to play.

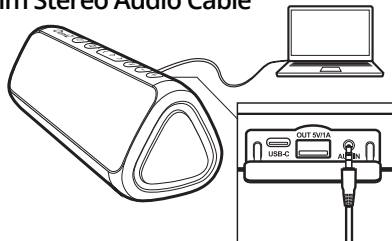


Important: The Bluetooth on the OontZ Angle 3 Pro is disabled when the Source Button is pressed. To switch back to Bluetooth press the Source Button and the OontZ Angle 3 Pro allows the last device it was connected to automatically reconnect with the speaker and that device is within range.

Important Notes:

- Note: The rubber flap needs to be closed before the speaker is exposed to water. The speaker is not water-resistant or waterproof when the flap is open.
- The volume control on your device and the speaker work independently of each other. To play the speaker at the loudest volume, set the volume on your device to maximum and raise the volume on the speaker to maximum.

OontZ Wireless Dual Stereo - Connect two OontZ Angle 3 Pro speakers together

 
Play your music wirelessly through both speakers up to 100 feet apart*

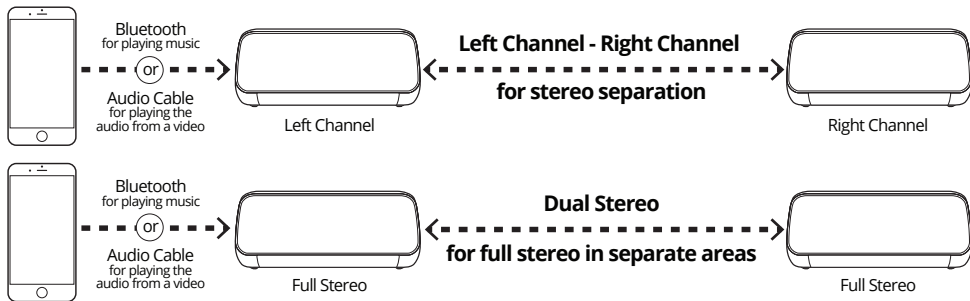

*Placing the speakers on the ground or having walls or obstructions between the speakers will significantly reduce the distance apart the two speakers can play together

Connecting two OontZ Angle 3 Pro speakers together for Left Channel - Right Channel

You can also use the OontZ app to connect two OontZ Angle 3 Pro speakers together - See page 22 for instructions on using the OontZ app

- Turn on both OontZ Angle 3 Pro speakers. 
- Pair and Connect one of the speakers with your device. When connected the Bluetooth Button  light will be lit Solid Blue. This speaker will serve as the **Play Control Speaker**.
- The second speaker must not be connected to any device, its Bluetooth Button  light needs to be flashing. If the second speaker has a solid Blue Light it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 3 seconds until the Bluetooth Button  light begins flashing.
- On the **Play Control Speaker** (speaker with solid Blue Light) press and hold down the **Play/Pause button**  for 3 seconds until the **Play/Pause Button** is flashing with a White Light and the speaker says "Dual Pairing".
- After a few seconds both speakers **Play/Pause Button**  will be lit with a solid White light. The **Play Control Speaker** will say "Left Channel" and the second speaker will say "Right Channel". The speakers will be connected together for Left Channel - Right Channel and you are ready to play.

Two OontZ Angle 3 Pro Speakers connected for Left Channel - Right Channel



- Use the buttons on the **Play Control Speaker** for play/pause, track back, track forward, answer and end phone calls. These controls are disabled on the second speaker when paired together.
- Use the **Play Control Speaker** for connecting to different audio devices via Bluetooth or AUX IN. The Bluetooth and AUX IN are disabled on the second speaker when paired together.
- Speakerphone call audio will only play through the **Play Control Speaker**

Changing to Dual Stereo from Left Channel - Right Channel

Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- To set both speakers for Dual Stereo they must first be connected together for Left Channel - Right Channel (see page 15).
- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press and hold down the **Track Forward button** > on the **Play Control Speaker** for 3 seconds until the **Play/Pause Button Lights** ▶ turn from solid White to solid Orange on both speakers.
- Both speakers will say "Dual Stereo" and you are ready to play.

Changing back to Left Channel - Right Channel from Dual Stereo

- To change back to Left Channel - Right Channel, press and hold down the **Track Forward button** > on the **Play Control Speaker** for 3 seconds until the **Play/Pause Button Lights** ▶ turn from solid Orange to solid White on both speakers.
- The **Play Control Speaker** will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.

OontZ Wireless Dual Stereo - Important Notes

Turning the speakers off

- Turning the **Play Control Speaker** off will turn both speakers off.
- Turning the second speaker off first will only turn that speaker off and the **Play Control Speaker** will play as a single speaker.

Turning the speakers back on

- Turn both speakers on and they will automatically try to connect to each other again.
- Turn one of the speakers on and a device can connect with it, and play as a single speaker.

Disconnecting the two speakers from each other

- Both speakers need to be turned on.
- On the **Play Control Speaker** press and hold down the **Play/Pause button** ► for 3 seconds. The White Lights will turn off and the speakers will be disconnected from each other.

Playing the audio from a video in OontZ Wireless Dual Stereo

- To play the audio from a video or TV in OontZ Wireless Dual Stereo you will need to connect the **Play Control Speaker** to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the **Play Control Speaker** is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.
- You can also use the OontZ Bluetooth Adapter (Sold separately on www.theoontz.com) with it's low latency technology which removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video when playing to two OontZ Angle 3 Pro speakers.

The OontZ app

Control the advanced features of your OontZ Angle 3 Pro from your iPhone or Smartphone running the Android operation system.

EQ - Adjust the Treble and Bass levels

Volume Control - With two OontZ Angle 3 Pro speakers in OontZ Wireless Dual Stereo sync the volume to control both speakers together or independently control the volume on each OontZ Angle 3 Pro speaker

Dual Stereo - Connect, Disconnect and change between Left Channel - Right Channel and Dual Stereo when using two OontZ Speakers in OontZ Wireless Dual Stereo

 
Audio Source - Change the audio source between Bluetooth and Aux In

Support - View the latest online manual and get OontZ speaker updates

Speakers - Select to allow the OontZ app to control other connected OontZ speakers

Download the OontZ app from the Apple App Store® or Google Play™ Store.

- 1) Open the Apple App Store® or Google Play™ Store on your iPhone or Smartphone running the Android operating system.
- 2) Search for the "Oontz" app and install.
- 3) After the app has been installed the Oontz app will appear on your iPhone or smartphone.

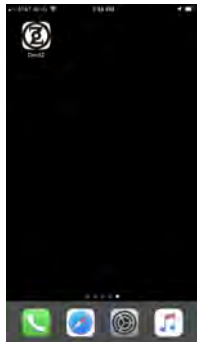

The OontZ app

To enable the OontZ app with your OontZ Angle 3 Pro

- Turn on your OontZ Angle 3 Pro speaker
- Launch the OontZ app and the Home screen will appear
- Select the Menu ≡ in the upper left hand corner of the OontZ app and the Menu screen will appear
- Select 'Speakers' from the Menu and the Speaker screen will appear

OontZ Angle 3 Pro icon is Grey

 
- Press the Grey speaker icon on the app to enable the OontZ app with the OontZ Angle 3 Pro
- The OontZ app will be enabled with your OontZ Angle 3 Pro in a few seconds
- The Grey speaker icon will turn Blue and the **Play/Pause Button Light** ▶ on the OontZ Angle 3 Pro will turn solid Green
- The OontZ app is enabled and ready to use.

If the OontZ Angle 3 Pro icon is Blue and **Play/Pause Button Light** ▶ on the OontZ Angle 3 Pro is solid Green

- The OontZ app is already enabled and ready to use.



Home screen



Menu screen



Speaker screen

Using the OontZ app for EQ and Volume Control

Select the Menu ≡ in the upper left hand corner of the app

- Select 'EQ' from the menu to access the speaker Equalizer screen
- Select 'Volume Control' from the menu to access the Volume Control screen

EQ
screen



The Left slider adjusts the Bass and the Right slider adjusts the Treble. Press 'Default EQ' to set the EQ to the default setting.

Works when connected to one or two speakers and the OontZ app will adjust both speakers to the same EQ with two speakers connected in OontZ Wireless Dual Stereo.

Volume
Control
screen
for One
Speaker



When using only one OontZ Angle 3 Pro speaker, the volume control functions the same for 'Sync Volume' or 'Independent Volume'.



Press 'Sync Volume' to control together the volume of two OontZ Angle 3 Pro speakers when connected in OontZ Wireless Dual Stereo.

Volume
Control
screen
for Two
Speakers








Press 'Independent Volume' to separately control the volume of two OontZ Angle 3 Pro speakers when connected in OontZ Wireless Dual Stereo.

Using the OontZ app for OontZ Wireless Dual Stereo

Connect two OontZ Angle 3 Pro speakers together - Play your music wirelessly through both speakers up to 100 feet apart.

Refer to Page 14 for more information about OontZ Wireless Dual Stereo

- Turn on **one** of the OontZ Angle 3 Pro speakers.
- Pair and Connect the speaker with your device. When connected the **Bluetooth Button Light**  will be lit solid Blue. This speaker will serve as the **Play Control Speaker**.
- Enable the OontZ app with the OontZ Angle 3 Pro speaker. When the OontZ app is enabled the **Play/Pause button Light**  on the OontZ Angle 3 Pro will be lit solid Green.
- Turn on the **second** OontZ Angle 3 Pro speaker.
- The second speaker must not be connected to any device, its Bluetooth Button light needs to be flashing. If the second speaker has a solid Blue **Bluetooth Button Light**  it is connected to a device and you need to disconnect it by pressing and holding down the **Bluetooth Button**  for 3 seconds until the **Bluetooth Button Light**  begins flashing.
- Refer to the next page for connecting the two OontZ Angle 3 Pro speakers together with the OontZ app.

Using the OontZ app for OontZ Wireless Dual Stereo

 
Select the Menu ≡ in the upper left hand corner of the app and select 'Dual Stereo' from the menu.



Press 'Connect' to connect two OontZ Angle 3 Pro speakers in OontZ Wireless Dual Stereo mode.



After a few seconds the second speaker **Play/Pause Button Light** > will be lit solid White. The Play Control Speaker will say "Left Channel" and the second speaker will say "Right Channel". The speakers are connected together for Left Channel - Right Channel and you are ready to play.



Disconnecting and Reconnecting the OontZ Angle 3 Pro speakers.

- Press 'Disconnect' to disconnect the two OontZ Angle 3 Pro connected speakers.
- The Play/Pause Button White Light on the second speaker will turn off and the speakers will be disconnected from each other.
- To reconnect press 'Connect' with both OontZ Angle 3 Pro speakers turn on.

Playing the audio from a video in OontZ Wireless Dual Stereo

- To play the audio from a video or TV in OontZ Wireless Dual Stereo you will need to connect the Play Control Speaker to your device or TV using a the 3.5mm Stereo Audio Cable, allowing the audio and video to play in sync with each other. If the Play Control Speaker is connected over Bluetooth to your device or TV there will be a delay in the audio playback from a video.

Using the OontZ app for OontZ Wireless Dual Stereo



Use Dual Stereo when placing the two speakers in different areas, and both speakers will play in full stereo.

- With the speakers connected together for **Left Channel - Right Channel**, you can change the speakers to **Dual Stereo**.
- To change to Dual Stereo, press 'Dual Stereo'.
- The **Play/Pause Button Light** > on the second speaker will change from solid White to solid Orange.
- Both speakers will say "Dual Stereo" and you are ready to play.



Use Left Channel - Right Channel for incredible left and right stereo separation.


- With the speakers connected together for **Dual Stereo**, you can change the speakers to **Left Channel - Right Channel**.
- To change to Left Channel - Right Channel, press 'Left Channel Right Channel'.
- The **Play/Pause Button Light** > on the second speaker will change from solid Orange to solid White.
- The Play Control Speaker will say "Left Channel" and the second speaker will say "Right Channel" and you are ready to play.

Using the OontZ app for Audio Source selection

Select the Menu ≡ in the upper left hand corner of the app and select 'Audio Source' from the menu.





Press "Aux In" to change the audio source for the OontZ Angle 3 Pro to play from the device connected to the OontZ Angle 3 Pro Aux In Jack.

The Source Button Light  on the OontZ Angle 3 Pro will be lit solid Green.



Press "Bluetooth" to change the audio source for the OontZ Angle 3 Pro to Bluetooth. The last device connected to the OontZ Angle 3 Pro will automatically reconnect if that device is turned on and within range.

The Bluetooth Button Light  on the OontZ Angle 3 Pro will flash Blue until reconnected to your device. After connected the Bluetooth Button Light  will be lit solid Blue.

Using the OontZ app for Speaker selection

The OontZ app allows you to control different supported OontZ speakers.

The OontZ app currently supports the following OontZ speaker models:

 
- OontZ Angle 3 Pro
- OontZ Angle 3 Shower with Alexa (OontZ app support only for Alexa function)

For the latest list of supported OontZ speakers please visit
TheOontZ.com/OontZapp

To utilize the OontZ app with a different supported OontZ speaker.

- Select the Menu ≡ in the upper left hand corner of the OontZ app and select 'Speakers' from the menu
- Select the desired speaker from the available list of OontZ speakers
 - Speaker icon is Blue - the OontZ app is already enabled with this speaker
 - Speaker icon is Grey - press and the OontZ app will be enabled with this speaker.

The Play/Pause Button Light ▶ on the OontZ Angle 3 Pro will be lit solid Green to indicate the OontZ app is enabled with this speaker.

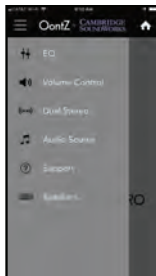


Menu screen



Speaker screen

Using the OontZ app for Support

 Select the Menu ≡ in the upper left hand corner of the app and select 'Support' from the menu to access the Support screen.

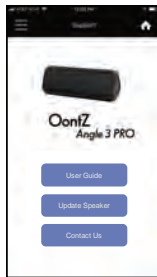

Press 'User Guide' to display the latest version of the online user guide and FAQ for the OontZ Angle 3 Pro.

Press 'Update Speaker' to check the version of the current firmware version on the OontZ Angle 3 Pro and whether there is a new version available.

Press 'Contact Us' to display the customer support form. Fill in the information in the displayed form to email to our OontZ support team.



The firmware version of the OontZ Angle 3 Pro is shown under 'Current Firmware Version'.

If there is a new version of firmware for the OontZ Angle 3 Pro it will be displayed under 'New Firmware Version' along with the version number of the update.


To update the OontZ Angle 3 Pro to the 'New Firmware Version' press 'Update Speaker' and follow the instructions in the OontZ app.

Note: The update may take up to 30 minutes. Make sure the OontZ Angle 3 Pro is plugged into power and the iPhone or Smartphone is not interrupted by a phone call during the update of the OontZ Angle 3 Pro.

Reset Function



Step 1: Remove the USB Type C Charging Cable and 3.5mm Stereo Audio cable, if connected.

Step 2: With the OontZ Angle 3 Pro on, press the **Power button**  and **Volume +** together and release. The speaker will then turn off.

Step 3: The speaker has now been reset and you can turn it on.

Customer Support

If you have a question about your OontZ Angle 3 Pro or experience an issue with the speaker, our Customer Support Team wants to assist you.

For online troubleshooting tips please visit:

TheOontZ.com/troubleshooting
and select the OontZ Angle 3 Pro

For latest version of this manual please visit:

TheOontZ.com/pages/manuals
and select the OontZ Angle 3 Pro

Contact us at:

TheOontZ.com/support
and fill in our customer support form

Safety and Precautions

- 1. When the OontZ Angle 3 Pro speaker is plugged in to a charging source with the USB Type C Charging Cable, never use the speaker in the shower, bath, or near water, to prevent risk of electric shock.**
2. Read and follow all instructions – All operating and use instructions should be followed.
3. Protect the USB Type C Charging Cable from being pinched, particularly at the connectors.
4. Unplug the USB Type C Charging Cable during lightning storms or when unused for long periods of time.
5. Do not place speaker near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
6. Refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way.
7. Do not make alterations to this speaker.
8. The battery in the speaker is not replaceable. Do not attempt to change it.
9. Use this speaker only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC) in accordance with the manufacturer's specifications.
10. Do not place near naked flame sources, such as lighted candles, on or near the speaker.
11. Do not expose this speaker to excessive heat
(e.g. from storage in direct sunlight, fire or the like)
12. If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.

Safety and Precautions (continued)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Apple, iPhone, iPad, iPod, Mac and Siri are registered trademarks of Apple Inc.

Amazon, Amazon Echo Input, Amazon Echo and Amazon Echo Dot are registered trademarks of Amazon.com, Inc.

Windows is a registered trademark of Microsoft Corporation

Bluetooth is a registered trademark of Bluetooth SIG, Inc

UL is a registered trademark of UL.

OontZ Bluetooth Adapter

Sold separately

- Allows you to play wirelessly over Bluetooth from your TV and Devices that do not have built-in Bluetooth.
- When playing with two OontZ Angle 3 Pro speakers, using the OontZ Bluetooth Adapter with it's low latency technology removes or eliminates the delay in the audio playback from the video and allows the audio to play in sync with the video.
- Pairs with a single button to one or two OontZ Angle 3 Pro speakers



Available at TheOontZ.com

OontZ Angle 3 BudZ

Sold separately

- Totally Waterproof & Sweatproof
- Ultra-Comfortable and Secure Fit
- Superior Sound with Deep Bass
- Noise Cancellation of Background Noise
- Listen All Day with Playtime up to 8 hours
- Perfect For Any Activity

